EQUIPMENT SOLD BY

THE GATE GUY

Practical help. Real installation experience.

AMERICAN ARMOR AUTOMATION

Manufacturer documentation / retailer-supplied copy

Ranch Code

Receiver / transmitter setup

The original manufacturer document follows this retailer cover. Manufacturer logos, instructions, safety notices and warranty language are preserved. Match the document to your equipment.

(830) 402-8434
sales@texasgateguy.com
americanarmorgateoperator.com

Installation services are quoted separately through The Gate Guy.

Equipment warranty and installation-labor coverage are separate.

Ranch Code Receiver and Transmitter


Do not confuse the receiver code switches with the red program switches on the gate control board.

Never set all code switches to the same position. Transmitters must match code switches for proper operation.

If power is taken directly from battery or connected as shown below, receiver should be configured for 12VDC



Ranch Code Receiver Wiring

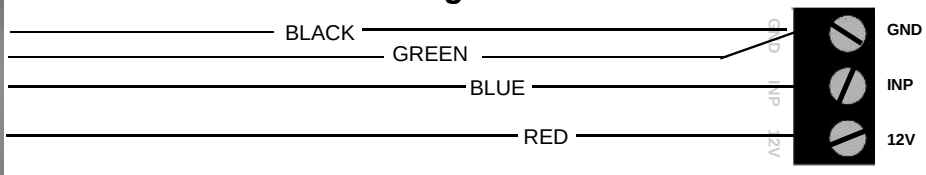



Ranch Code Receiver pre-wired with circuit board plug



Remove cover by sliding dip witch access door to the right



Set dip switche code on left to match transmitter




Ranch Code Transmitter Part # RCT



Slide dip switch cover down sets switch code



Remove battery saver tab

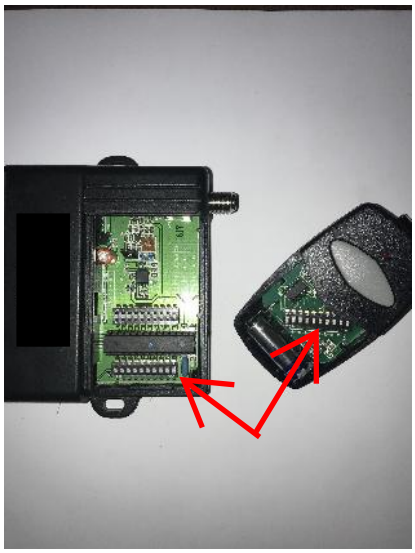

Set dip switch code on receiver to match transmitter and replace covers